



The Automatic Door Company
www.theautomaticdoorco.com

Self Maintenance Checklist

Sometimes a simple check can solve little problems that occur with your automatic doors. Here are some tips from our ADC engineers.



Check Sensor

Make sure that your sensor is in full working order. To check your sensor, stand four feet away from the auto entrance and you should see your doors automatically open.



Doors Opening

Check surrounding area and make sure the sensors are clear. You may have an object, plant pot, or another item blocking the infrared rays causing the issue.




Noisy Doors

Make sure no loose screws are visible and no damage has been made to the glass or door itself. Small cracks and dents might seem harmless now, but they'll worsen if left.



Door Sticking

Keep guides clean and remove any dirt or debris that will damage your doors over time. Common causes of doors sticking is debris in the lower track.

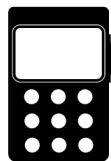

Keypad Errors

Check that your BDE (keypad device) is not showing any warning messages or indication that maintenance is required. If so call our service team.



Safety Devices

Check that the safety devices are working correctly and that the moving door leaf avoids contact with any person using the door.

Need Help?

Call 0800 0838630